

RS000BP




Yamaha YFZ 350 BANSHEE Adjustable Stator Plate

Use a high quality lock tight when bolting all parts to your new adjustable timing plate.

To set the timing at the stock setting align the split in the side case with the zero on the timing plate.

Before attempting to start your Banshee adjusting the air gap is necessary. Rotate the flywheel so the raised node is lined up with the pulser as shown. Adjust as close as possible but, no less than .020".

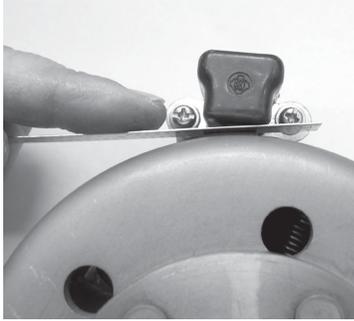

Ricky Stator

1672 Main St., Suite E, PMB 104, Ramona, CA 92065
(760) 787-0094 • Fax 787-0313
E-mail: stator@adnc.com • www.rickystator.com

RS000BP




Yamaha YFZ 350 BANSHEE Adjustable Stator Plate

Use a high quality lock tight when bolting all parts to your new adjustable timing plate.

To set the timing at the stock setting align the split in the side case with the zero on the timing plate.

Before attempting to start your Banshee adjusting the air gap is necessary. Rotate the flywheel so the raised node is lined up with the pulser as shown. Adjust as close as possible but, no less than .020".

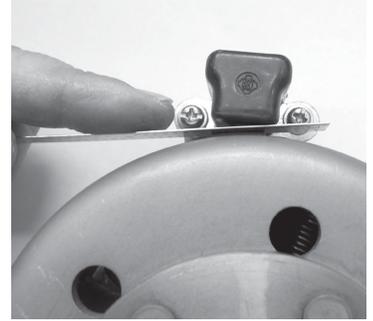

Ricky Stator

1672 Main St., Suite E, PMB 104, Ramona, CA 92065
(760) 787-0094 • Fax 787-0313
E-mail: stator@adnc.com • www.rickystator.com

RS000BP




Yamaha YFZ 350 BANSHEE Adjustable Stator Plate

Use a high quality lock tight when bolting all parts to your new adjustable timing plate.

To set the timing at the stock setting align the split in the side case with the zero on the timing plate.

Before attempting to start your Banshee adjusting the air gap is necessary. Rotate the flywheel so the raised node is lined up with the pulser as shown. Adjust as close as possible but, no less than .020".

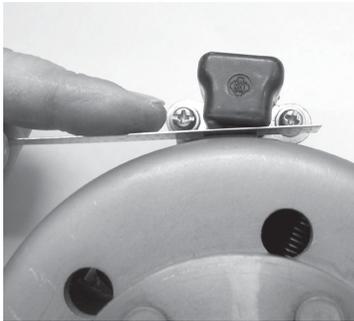

Ricky Stator

1672 Main St., Suite E, PMB 104, Ramona, CA 92065
(760) 787-0094 • Fax 787-0313
E-mail: stator@adnc.com • www.rickystator.com

RS000BP



Yamaha YFZ 350 BANSHEE Adjustable Stator Plate

Use a high quality lock tight when bolting all parts to your new adjustable timing plate.

To set the timing at the stock setting align the split in the side case with the zero on the timing plate.

Before attempting to start your Banshee adjusting the air gap is necessary. Rotate the flywheel so the raised node is lined up with the pulser as shown. Adjust as close as possible but, no less than .020".



Ricky Stator

1672 Main St., Suite E, PMB 104, Ramona, CA 92065
(760) 787-0094 • Fax 787-0313
E-mail: stator@adnc.com • www.rickystator.com