

RSMY1-BP

RSMY1-BP



Installation instructions for :



Installation instructions for :

Yamaha Blaster Adjustable Stator Plate

Yamaha Blaster Adjustable Stator Plate

- ❖ To set the timing at the stock setting align zero with the bottom of the notch as shown in the picture.

- ❖ To set the timing at the stock setting align zero with the bottom of the notch as shown in the picture.

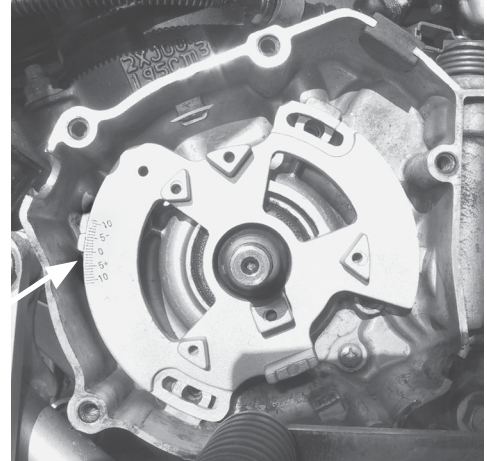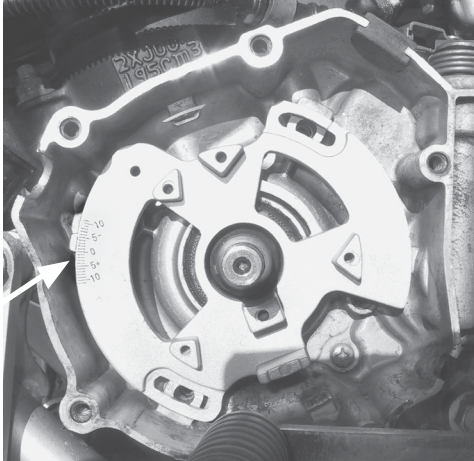

Ricky Stator

Ricky Stator

1672 Main St., Unit E, Box 104, Ramona, CA 92065
 760-787-0094 • Fax 787-0313
 E-mail: stator@adnc.com • www.rickystator.com

1672 Main St., Unit E, Box 104, Ramona, CA 92065
 760-787-0094 • Fax 787-0313
 E-mail: stator@adnc.com • www.rickystator.com

RSMY1-BP

RSMY1-BP



Installation instructions for :



Installation instructions for :

Yamaha Blaster Adjustable Stator Plate

Yamaha Blaster Adjustable Stator Plate

- ❖ To set the timing at the stock setting align zero with the bottom of the notch as shown in the picture.

- ❖ To set the timing at the stock setting align zero with the bottom of the notch as shown in the picture.

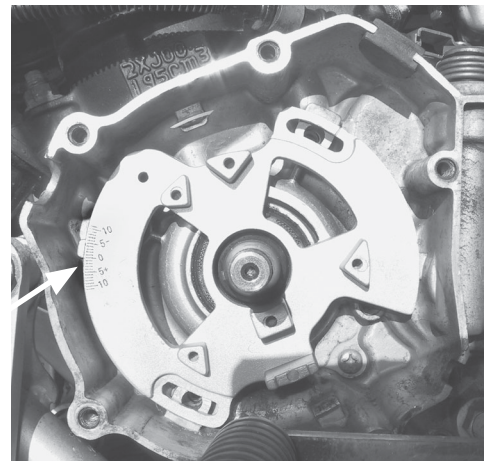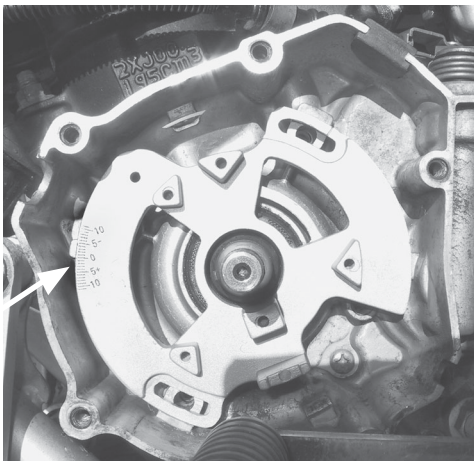

Ricky Stator

Ricky Stator

1672 Main St., Unit E, Box 104, Ramona, CA 92065
 760-787-0094 • Fax 787-0313
 E-mail: stator@adnc.com • www.rickystator.com

1672 Main St., Unit E, Box 104, Ramona, CA 92065
 760-787-0094 • Fax 787-0313
 E-mail: stator@adnc.com • www.rickystator.com